# IMS QUICK REFERENCE

### **IMS Startup**

- 1. Insert the key in the ignition.
- 2. Start the vehicle engine.
- 3. Wait for the five-second countdown and the engine to shut down.
- 4. The IMS is now active.

#### **IMS Shutdown**

- 1. Place the vehicle in PARK.
- 2. Remove the key from the ignition.
- 3. The IMS will be disabled and the screen will shut down in one minute.

### **IMS Engine Start Options**

- 1. Press and release the brake pedal.
- 2. Turn the key to the START position.
- 3. Engage the IMS Bypass feature. (if applicable)



**Heating/Cooling Indicator** 



**IMS Running Engine** 



**Engine Off in IMS Mode** 



## **Battery State of Charge**

## **Climate Control Status**





NOTICE: The climate control status corresponds to the factory blend door control setting.

**RAM Specific:** Once you have set the blend door to heat or cool, ensure to press the up arrow for heat or the down arrow for cool for proper operation.

ZeroKEY Mode
On (green) / Off (white)



Info Screen (Hold for two seconds.)



Revision E



CONTACT OUR SUPPORT TEAM AT: 1-844-ZERORPM (937-6776) SUPPORT@ZERORPM.COM