

# IMS QUICK REFERENCE

## IMS Startup

1. Turn master switch to ON position.
2. Turn ignition switch to ON position.
3. Press START button to start the engine.
4. Wait for the five-second countdown and the engine to shut down.
5. The IMS is now active. ZeroRPM logo is now displayed.

## IMS Shutdown

1. Place the vehicle in PARK.
2. Turn the ignition switch to OFF position.
3. Turn master switch to OFF position.
4. The IMS will be disabled and the screen will shut down in one minute.


## IMS Engine Start Options

Choose any one of the below:

1. Press and release the brake pedal.
2. Engage the IMS Bypass feature (PUMP).
3. Turn the key to the START position.



Heating/Cooling Indicator

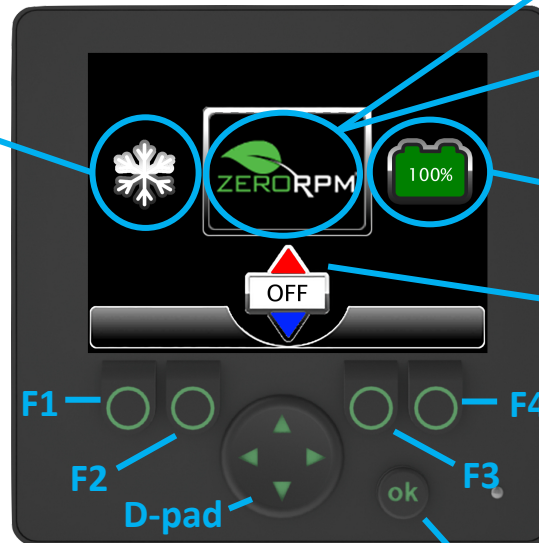

Engine is Running and IMS is OFF



Engine is Off and IMS is ON



Battery State of Charge

Climate Control Status



NOTICE: The climate control status corresponds to the factory blend door control setting

Info Screen (Hold for two seconds.)



CONTACT OUR SUPPORT TEAM AT:  
1-844-ZERORPM (937-6776)  
SUPPORT@ZERORPM.COM