

# IMS QUICK REFERENCE

## IMS Startup

1. Turn master switch to ON position.
2. Turn ignition switch to ON position.
3. Press START button to start engine.
4. Wait for 120-second countdown and for engine to shut down.
5. IMS is now active. ZeroRPM logo is now displayed.

## IMS Shutdown

1. Place vehicle in PARK.
2. Turn ignition switch to OFF position.
3. Turn master switch to OFF position.
4. IMS will be disabled; screen will shut down in one minute.


## IMS Engine Start Options

Choose any one of the below:

1. Press and release brake pedal.
2. Engage IMS Bypass feature (PUMP).
3. Press START button.



Heating/Cooling Indicator

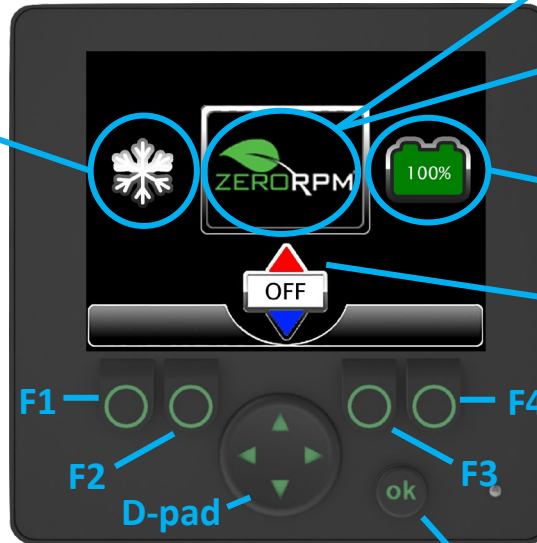

Engine is Running and IMS is OFF



Engine is Off and IMS is ON



Battery State of Charge

Climate Control Status



NOTICE: Climate control status corresponds to factory blend door control setting.

Info Screen (Hold for two seconds.)



CONTACT OUR SUPPORT TEAM AT:

1-844-ZERORPM (937-6776)

[SUPPORT@ZERORPM.COM](mailto:SUPPORT@ZERORPM.COM)